

Mode set for ambient light

for flash w/o cord


for flash w/ sync cord

These are images of the Sekonic Flashmate L-308S in each of its 3 modes.

Power Switch----->

Mode Switch ----->  
push to cycle through modes

ISO button ----->  
Hold down while pushing the up/down switch to set ISO

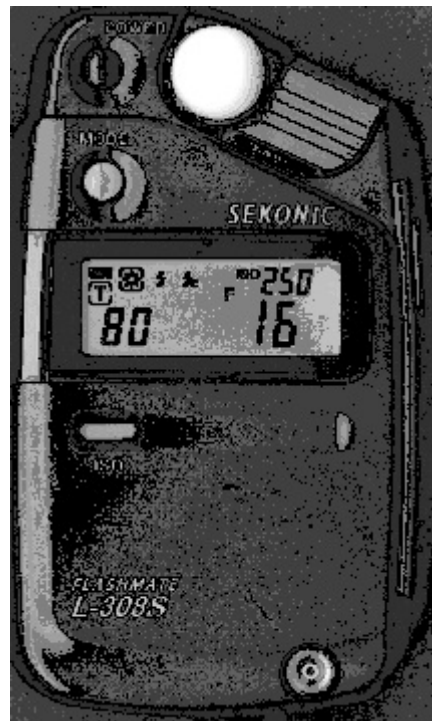

<-----Dome - can be slid out of way for reflective readings

<-----Activating button - Push to make readings

<----- Up/Down rocker switch

<-----PC cord attachment

To Use:

1. Turn on with power switch
2. Set ISO/ASA by holding down ISO/ASA button while operating the Up/Down switch
3. Set appropriate mode with Mode button  
With Flash the "Flash with Cord" is usually preferred.  
Plug the Sync cord into the meter to use this setting  
When the activating button is pushed the flash will operate and the meter will record the appropriate exposure.
4. Make reading by pointing dome at camera and pushing Activater button.
5. If different shutter speed or f-stop is desired, push the Up/Down button and they will change in unison.

The image at the bottom shows the meter set for:

ISO - 250  
Ambient Light Measurement  
1/80 second at f 16